


vollara®

# FRESH AIR MOBILE

ANYWHERE, EVERYWHERE

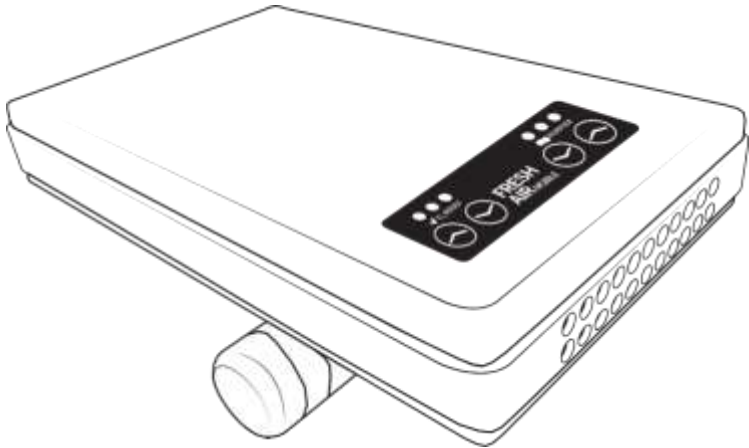

Portable Electronic Purifier

CAUTION: READ MANUAL CAREFULLY FOR PROPER PROCEDURES AND OPERATION.

Please record the name and phone number of your DGS Independent Business Owner:

Name: \_\_\_\_\_

Phone: \_\_\_\_\_

Please record the serial number of your FreshAir Mobile:

Serial #: \_\_\_\_\_

*Did you forget to register your FreshAir Mobile?*

By registering, you'll activate your warranty. Your privacy is guaranteed. Just fill out your warranty card and drop it in the mail.

CONTENT

Specifications..... 2

Control Pad Layout ..... 2

Operation ..... 3

Mounting the Base ..... 3

Adjusting the Wire Stand ..... 4

Wire Stand Positions ..... 4

Power Adapters ..... 5

12VDC Adapter Fuse ..... 5

Portability ..... 5

Disassembly..... 6

Yearly Maintenance ..... 6


Cleaning ..... 7

Troubleshooting ..... 7

SPECIFICATIONS

- 12VDC or 110 - 240 VAC 50/60Hz
- Operating Temperature: 45° F- 100° F (7° C- 38° C)
- Maximum 10.7 watts
- Fixed 8.5 KV DC needle ion generator
- 3 speed fan
- Fuse (12VDC adapter only): 2 amp Buss type
- Size: 3.625" x 6" x 1.0" 9.21cm x 15.25cm x 2.54cm w/o base
- Weight: 8 ounces (.23kg)

CONTROL PAD LAYOUT

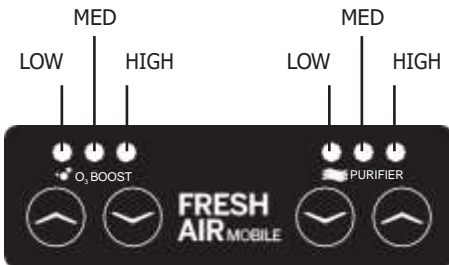

**WARNING!** - UV Lamp operation. Do not operate this unit unless the case is completely and correctly assembled. Failure to comply may result in serious eye damage.






**CAUTION!** - Use O<sub>3</sub> Boost in accordance with directions found in this manual only .



**CAUTION!** - Disconnect power cord before servicing .





## PARTS AND ACCESSORIES

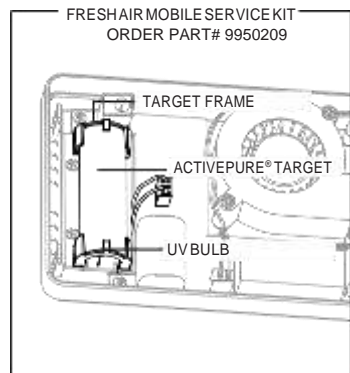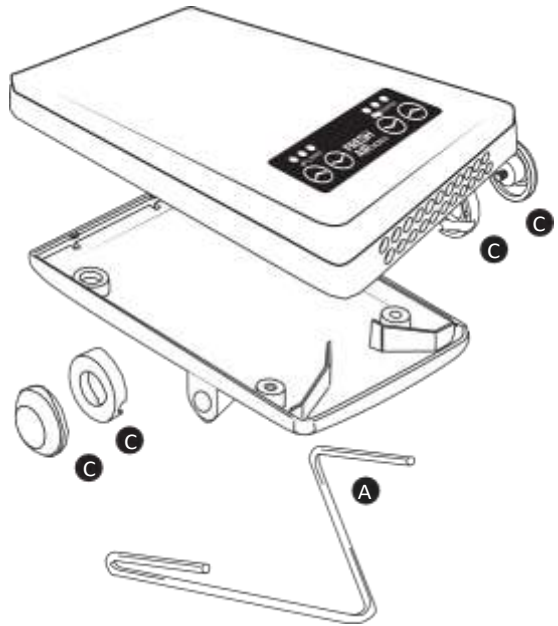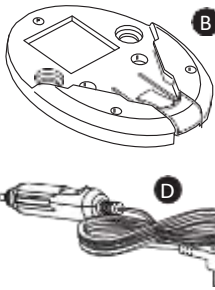A. WIRE STAND.....	9950153
B. BASE .....	9950154
C. KNOB/CLAMP PACK (2) .....	9950155
D. 12VDC ADAPTER .....	9950157
E. 2.0 AMP FUSE .....	9950162
F. AC ADAPTER.....	9950158




## OPERATION

1. If desired, mount the base in an appropriate location (see below).
2. Adjust the wire stand (see page 5).
3. Plug in either the 12VDC car adapter or the AC adapter .
4. The FreshAir Mobile unit will come on when power is supplied to the unit .
5. Adjust the Purifier by pressing the Purifier UP and Purifier DOWN buttons. When the unit is off, all the LED lights will also be off.
6. Set the O<sub>3</sub> Boost by pressing the O<sub>3</sub> Boost UP and O<sub>3</sub> Boost DOWN buttons. See the Settings chart (below) for proper adjustments. When the O<sub>3</sub> Boost is set to off, the LEDs will also be off; the Purifier LED(s) will remain on. DO NOT EXCEED RECOMMENDED SETTINGS.

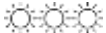
LEDs	Setting	Coverage
	Low:	Compact Car, Pickup
	Med:	Large Sedan, SUV, or Semi-Cab
	High:	RV/Motor Home or Houseboat
	OFF:	Purifier off: ionization & fan may continue operating if desired .

## MOUNTING THE BASE


The base for the FreshAir Mobile can be mounted using the included suction cups, Velcro, or screws, depending on preference. When using suction cups or Velcro, be sure the surface is smooth and clean. Dirt, grease, protectants, and other substances will affect performance and holding ability.

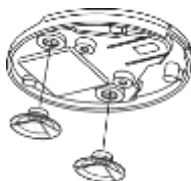

- Attach suction cups by pressing and twisting into the base, or...

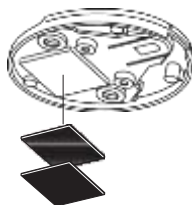

- Peel and stick one part of the Velcro to the base, then attach the other to a clean, dry surface, or...

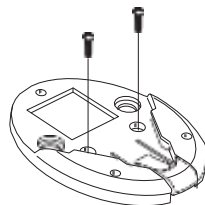

- Screws may be used for extra security and where the other methods are not appropriate.

## ADJUSTING THE WIRE STAND

---

The wire stand on the FreshAir Mobile allows for quick release from the base, provides a stand or hanger for the unit independent of the base, and allows the unit to either stand or hang from the base depending on how the base is mounted.

To adjust the wire stand, loosen the two knobs on the sides of the unit approximately 1/2 turn. The unit may then be tilted up or down to adjust the angle or moved on the wire stand to change the height. You can also remove and change the position of the wire stand to accommodate several different mounting methods. To reinstall, simply align the two clamp collars and insert the wire stand. Once the unit is adjusted, tighten both knobs to hold it in place.



## WIRE STAND POSITIONS


---



- Sitting on a flat surface with or without the base
- Hanging over an edge pointing down (laundry hamper, garbage can, etc.)



- Sitting on a flat surface without the base
- On a vertical surface with the base (wall mount, window, etc.)
- Hanging over an edge pointing up (seat pocket in car)

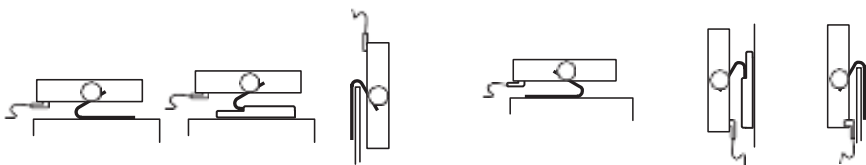

NOTE: Unit can be used without attaching the base or wire stand.

## EFFECTS OF HIGH OR LOW VOLTAGES ON FRESHAIR MOBILE™ WHEN USING THE 12VDC CAR ADAPTER

---

FreshAir Mobile™ has an operating voltage range of 11 VDC to 14.6 VDC. If the voltage coming into the unit is too high, the unit may blow the 12VDC adapter fuse. This type of problem usually indicates something is wrong with a vehicle's electrical system. If the unit shuts down while using the 12VDC automotive adapter and you are unsure of the cause, check the adapter fuse. If the fuse is not blown, test the unit using the supplied AC adapter. Once the voltage problem (drained car battery, electrical system problem, etc.) is corrected by a qualified service person, you will be able to resume using your FreshAir Mobile™ with the 12VDC adapter.

## POWER ADAPTERS

FreshAir Mobile comes with both a 12 volt DC car adapter and a 100 - 240 volt 50/60 Hz AC adapter with interchangeable plugs .



- Insert the car adapter into an appropriate 12 volt automotive type power outlet.

### 12VDC Adapter Fuse



To change the car adapter fuse, unscrew and remove the front of the adapter. Replace with the same type and rating only: 2 amp Buss type fuse (service part #9950162) .

**CAUTION:** Not for use on 12 volt positive ground or 24 volt vehicles. Doing so may damage the product.

## OR



- Select and install the proper international plug into the AC adapter. Insert correctly assembled adapter into a standard electrical outlet.

NOTE: when installing one of the interchangeable plugs, be sure to twist and lock it into place. When removing a plug, press the raised tab to release, then turn the plug out the top.

## THEN




- Insert the small adapter plug into the opening located underneath at the rear of the unit.

## PORTABILITY

Depending on how it is mounted, your FreshAir Mobile can be ready to take with you in just a few seconds.



- Once the unit is assembled and the base mounted, simply snap the wire stand into the base . The latch at the front of the base should snap into place, locking in the stand and unit.

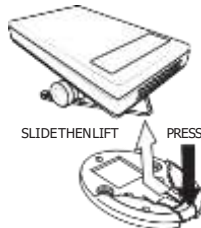

- To remove the unit from an attached base, press down on the front latch and slide the unit back, then up.




- For added convenience, mount extra bases where you use your FreshAir Mobile most . See your DGS Independent Business Owner for more information.

NOTE: If you prefer to remove the base and unit together, mount the base with Velcro or suction cups to a clean, dry surface.


## DISASSEMBLY (FOR MAINTENANCE AND REPLACEMENT OF SERVICE KIT 9950209)

All user maintainable parts of the FreshAir Mobile are accessed by removing the lower half of the case.


**CAUTION:** The unit must be disconnected from its power source before servicing, and should not have the power reconnected unless the case is correctly and completely reassembled.

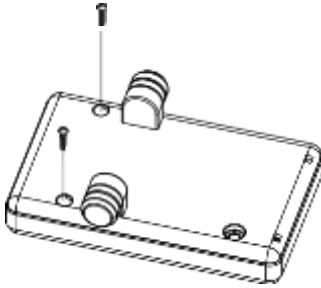


1. Turn unit over, tilt up slightly, and remove screws at the front of the unit.

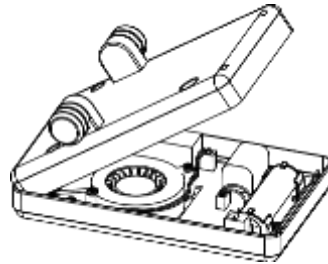

2. With the front remaining tilted up, slide the lower half of the case back and up until it is free.

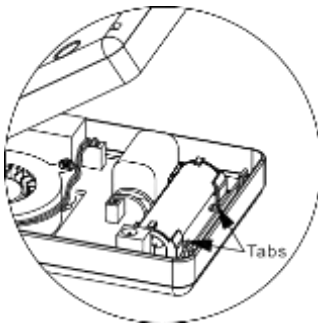


3. Lift the small circuit board holding the target screen and bulb (Bulb Assembly) from the two tabs.

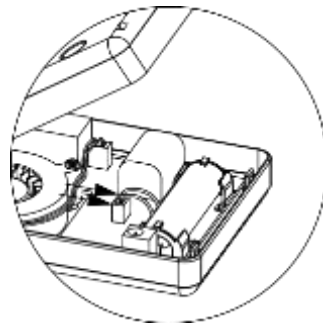

4. Disconnect the leads of the Bulb Assembly from the main circuit board.

## DISASSEMBLY - CONTINUED




5. Remove the Bulb Assembly from the unit.

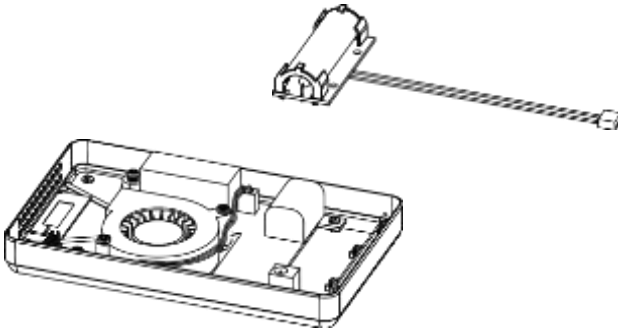

## ASSEMBLY

Reinstallation is the reverse of the above steps:

- UV lamp – Do not touch with bare hands. If touched, clean the bulb with a cotton swab and a small amount of alcohol.
- Attach ActivePure® Target Screen (a) to the Target Frames (b).
- Install the legs of the Target Frames (b) into the four holes of the Bulb Assembly PC board (c).
- Attach the 3 pin connector (e) of the Bulb Assembly to the main unit PC board.
- Carefully align the two holes in the Bulb Assembly to the two tabs on the main unit.
- Press gently to install the Bulb Assembly.
- Carefully replace the bottom case, being sure the pins inside the back of the bottom case fit into the two standoffs at back of the top case. Slide the bottom case forward then down, making sure the wires are completely inside the case.
- Check for proper alignment before installing and tightening the screws. Failure to correctly assemble may cause damage to the case.
- Replace cover and two screws.

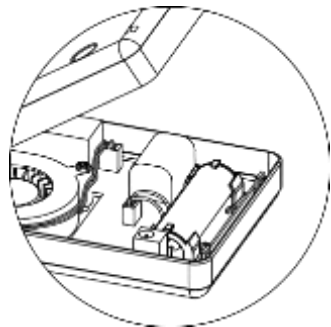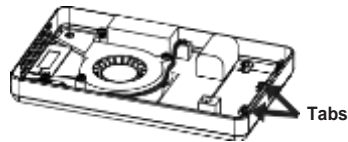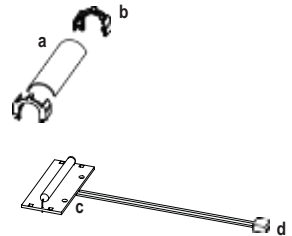

## YEARLY MAINTENANCE

A service kit is available for your FreshAir Mobile. The kit contains a new ActivePure® Target, UV bulb, and ActivePure® Purification Plate. For optimum performance, DGS recommends replacing these components annually. See your DGS Independent Business Owner for more information.



## CLEANING

---

Depending on conditions, your FreshAir Mobile will require periodic cleaning of certain internal components every one to three months.

ActivePure® Target - Clean the target by gently removing dust with a small, soft brush .

UVBulb - The UV bulb should be gently wiped with a soft, dry cloth. Avoid handling the UV bulb more than necessary.

ActivePure® OzonePlate - The top area of the ActivePure® Purification Plate can be cleaned with ammonia or alcohol and a cotton swab. Do not use water. Allow to dry thoroughly.

Case - Clean the exterior case of your FreshAir Mobile with a soft cloth dampened (not wet) with water. Do not use harsh chemicals or solvents.

Fan/Interior of unit - The interior and fan may be cleared of dust using canned air suitable for electronics.

NOTE: See page 8 for detail views of components .

## TROUBLESHOOTING

---

WARNING: Under no circumstances should your FreshAir Mobile unit be operated while any part of the case is damaged, missing, or disassembled. If the case is damaged, return your unit to Vollara for repair or replacement. Direct exposure to the internal UV light may cause eye damage.

Unit does not operate/the O<sub>3</sub> Boost does not operate/all LEDs off

- Unplug and reinsert the adapter plug and adapter to check where the power supply is plugged in to be sure it has power.
- If using the 12VDC car adapter, remove the fuse by unscrewing the end of the adapter and check to see if it is blown. Replace it with the same type and rating fuse only (see Specifications). If the fuse is not blown, check the outlet for proper voltage.

UV bulb or O<sub>3</sub> Boost may not be working

- Press the PURIFIER UP or PURIFIER DOWN buttons to turn the Purifier function ON.
- If checking O<sub>3</sub> Boost operation, press the O<sub>3</sub> Boost UP button to turn the O<sub>3</sub> Boost ON .
- Remove the Bulb Assembly, clean, and reinstall (see Disassembly and Cleaning).
- If cleaning and reinstalling does not correct the problem, replace the Bulb Assembly (service kit #9950209).
- When looking through the rear inlet vents in low light you should see a slight bluish glow. If there is no glow, replace the Bulb Assembly (service kit #9950209).

Lack of air flow

- Make sure the intake vents are not blocked and the front of the unit is clear.
- Check to see if the fan is operating (if not, see above).

If your unit fails to operate properly after performing troubleshooting, contact your DGS Independent Business Owner for further assistance . You may also contact DGS at +91 9611293563, or email [contact@darshindia.com](mailto:contact@darshindia.com) for additional support.

## LIMITED 1 YEAR WARRANTY

---

### WHAT IS COVERED BY THIS WARRANTY

We warrant the FreshAir Mobile to the consumer, subject to the conditions below, against defects in workmanship or material, provided that the products are returned to a service location within the following time periods:

- FreshAir Mobile within one (1) year of date of purchase.

### INSTALLATION AND MAINTENANCE REQUIREMENTS

This warranty is expressly conditioned upon proper installation, operation, cleaning and maintenance, all in accordance with the User's Manual. Failure to meet any of these requirements will void this warranty. Servicing of your FreshAir Mobile by parties other than our authorized representative and/or using parts other than genuine parts will also void this warranty.

### HOW TO OBTAIN WARRANTY SERVICE

Customer must contact DGS Customer Service or their Independent Business Owner and provide proof of purchase within the above time period. We will repair or replace and return the product, without charge and within a reasonable period of time, subject to the conditions in the above paragraphs, if its examination shall disclose any part to be defective in workmanship or material. If we, in our discretion, are unable to repair the product after a reasonable number of attempts, we will provide either a refund of the purchase price or a replacement unit, at the company's option.

### WHAT IS NOT COVERED BY THIS WARRANTY

This product is intended for household use only. Ordinary wear and tear shall not be considered a defect in workmanship or material. These warranties do not apply to filters nor for loss or damage caused by accident, fire, abuse, misuse, improper installation, modification, misapplication, commercial use, or by any repairs other than those provided by our authorized Service Center.

### MISSING SERIAL NUMBERS AND UNAUTHORIZED CHANNELS

If a valid serial number is missing from the product, the warranty will be voided. DGS products are authorized for sale through DGS Independent Business Owners only. Warranties are voided if a product is purchased through unauthorized channels, this includes websites that are not authorized to use DGS'S trademarked names, images and logos as well as Internet auction sites (e.g. ebay and Craigslist). To confirm warranty coverage prior to purchasing a product, contact DGS at +91 9611293563 with the serial number located on the back of the unit.

### EXCLUSION OF OTHER WARRANTIES AND CONDITIONS

EXCEPT AS PROVIDED HEREIN, WE MAKE NO REPRESENTATION OR WARRANTY OF ANY KIND. ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

### LIMITATION OF LIABILITY FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES

WE SHALL NOT IN ANY CASE BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF EXPRESSED OR IMPLIED WARRANTIES, CONDITIONS, GUARANTEES OR REPRESENTATIONS, BREACH OF CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY. Such excluded damages include, but are not limited to, loss of profits or revenue, and loss of the use of the products.

### SERVICE

Every effort is made to ensure customers receive an up-to-date instructions manual on the use of our products; however, from time to time, modifications to our products may without notice make the information contained herein subject to alteration. For the latest information, please visit our web site.

